

INSTALLATION

0 0 0 0

MULTI-CONNECTOR for KÜRYAKYN AUXILIARY LIGHTS 5491

PARTS INCLUDED

- 2 Multi-Connector Wire Harnesses
- 2 Dielectric Grease Packets
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: IT IS VERY IMPORTANT TO UNDERSTAND THAT THESE

MULTI-CONNECTOR HARNESSES WILL NOT REPLACE ALL THE 8-PIN OR 6-PIN ADAPTER HARNESSES THAT ARE INSTALLED ON YOUR MOTORCYCLE. YOU WILL STILL BE REQUIRED TO USE ONE RUN-BRAKE ADAPTER HARNESS TO POWER ALL RUN-BRAKE REAR ACCENT LIGHTING AND OR ONE RUN-TURN ADAPTER HARNESS TO POWER ALL RUN-TURN ACCENT LIGHTING. ALSO, IF YOUR MOTORCYCLE IS EQUIPPED WITH KÜRYAKYN P/N 7767-L.E.D. RUN-TURN-BRAKE SPOILER-OR P/N 7766-AERION LIGHTBARS-YOU WILL NEED TO LEAVE THE WIRING ADAPTERS FOR THESE INSTALLED.

NOTE: The colors of wire used in the Multi-Connector Harnesses MAY NOT match the colors of wire used in the Adapter Harnesses or Accent Lighting, but the functions from the Adapter Harnesses will pass through these Multi-Connector Harnesses to the correct function wire on the rear Accent Lighting.

STEP 2

Remove the seat or side cover to gain access to the 6 or 8 pin Wiring Adapters installed on the motorcycle.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - •The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- •Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- •Küryakyn makes no warranty of any kind in regard to other manufacturer¹s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339,

Somerset, WI 54025.
Please indicate either Accessories Catalog for

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



Küryakyn

STEP 3

Using a piece of masking tape, label each Accent wire harness that is connected to each wiring adapter. PIC 1 If using a Run-Brake (PIC 2) and a Run-Turn (PIC 3) wiring adapter, label each of these for their functions also) This will assist in getting the Accent harness connected to the correct side of the Multi-Connector when installed. Disconnect the Accent Light Accessories from the wiring adapters.

STEP 4

Disconnect and remove all but one of the Run-Brake and/or Run-Turn Adapters installed on the motorcycle. Remember-you will need one Run-Brake and/or one Run-Turn Adapter connected to the motorcycle to correctly run the Accent Lighting.

NOTICE

Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 5

Place a dab of the included dielectric grease on the male end of each Multi-Connector and connect the Multi-Connectors to the female 3-Pin connectors on each Run-Brake and/or Run-Turn wiring adapter installed on the motorcycle. PIC 4

STEP 6

Place a dab of the included dielectric grease on the male 3-Pin connector on each rear Accent Lighting harness and connect to the 3-Pin female connector on the rear wiring adapter. On Run-Brake adapters, it will not matter which side each Accent is connected to. On rear Run-Turn wiring adapters, make sure that the Accent harness is connected to the correct function side of the wiring adapter. Test each rear Accent after connecting them. If the Run-Turn Accents do not light on the correct side, disconnect them and connect them to the opposite sides of the Run-Turn wiring adapter and test again.


NOTE: Remember, the wire colors of the Multi-Connector may or may not match the wire colors of the wiring adapter or Accent wire harness. PIC 4


NOTICE


Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.


STEP 7 Secure all wiring out of harms way and replace the seat or side cover.

WARNING AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

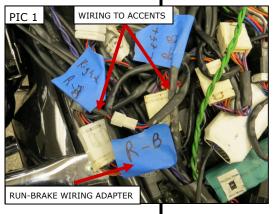

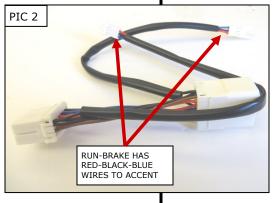

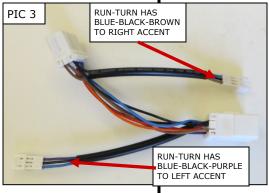

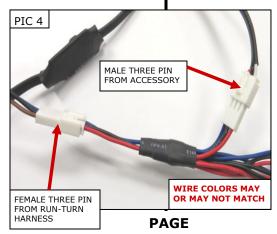

Ride On!